

2.4GHz/5GHz Universal Wireless Cardbus Adapter

User Guide

SMC2335W

2.4GHz/5GHz Universal Wireless Cardbus Adapter

- IEEE 802.11a and 802.11b Compliant
- Supports Major Windows Operating Systems
- 64-bit, 128-bit or 152-bit WEP encryption in 802.11a mode; 64-bit or 128-bit WEP encryption in 802.11b mode and Advanced Encryption Standard (AES)
- Ad-Hoc or Infrastructure Support
- Up to 1,650 feet of Operating Range
- Automatic Data Rate and Channel Selection
- Data Rates up to 108 Mbps in Turbo 802.11a mode and up to 11 Mbps in 802.11b mode with Autofallback capabilities

Limited Warranty Statement: SMC Networks, Inc. ("SMC") warrants its products to be free from defects in workmanship and materials, under normal use and service, for the applicable warranty term. All SMC products carry a standard 90-day limited warranty from the date of purchase from SMC or its Authorized Reseller. SMC may, at its own discretion, repair or replace any product not operating as warranted with a similar or functionally equivalent product, during the applicable warranty term. SMC will endeavor to repair or replace any product returned under warranty within 30 days of receipt of the product.

The standard limited warranty can be upgraded to a Limited Lifetime* warranty by registering new products within 30 days of purchase from SMC or its Authorized Reseller. Registration can be accomplished via the enclosed product registration card or online via the SMC website. Failure to register will not affect the standard limited warranty. The Limited Lifetime warranty covers a product during the Life of that Product, which is defined as the period of time during which the product is an "Active" SMC product. A product is considered to be "Active" while it is listed on the current SMC price list. As new technologies emerge, older technologies become obsolete and SMC will, at its discretion, replace an older product in its product line with one that incorporates these newer technologies. At that point, the obsolete product is discontinued and is no longer an "Active" SMC product. A list of discontinued products with their respective dates of discontinuance can be found at:

http://www.smc.com/index.cfm?action=customer_service_warranty

All products that are replaced become the property of SMC. Replacement products may be either new or reconditioned. Any replaced or repaired product carries either a 30-day limited warranty or the remainder of the initial warranty, whichever is longer. SMC is not responsible for any custom software or firmware, configuration information, or memory data of Customer contained in, stored on, or integrated with any products returned to SMC pursuant to any warranty. Products returned to SMC should have any customer-installed accessory or add-on components, such as expansion modules, removed prior to returning the product for replacement. SMC is not responsible for these items if they are returned with the product.

Customers must contact SMC for a Return Material Authorization number prior to returning any product to SMC. Proof of purchase may be required. Any product returned to SMC without a valid Return Material Authorization (RMA) number clearly marked on the outside of the package will be returned to customer at customer's expense. For warranty claims within North America, please call our toll-free customer support number at (800) 762-4968. Customers are responsible for all shipping charges from their facility to SMC. SMC is responsible for return shipping charges from SMC to customer.

WARRANTIES EXCLUSIVE: IF AN SMC PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT OF THE PRODUCT IN QUESTION, AT SMC'S OPTION. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SMC NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. SMC SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER

HAZARD. LIMITATION OF LIABILITY: IN NO EVENT, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), SHALL SMC BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE, LOSS OF BUSINESS, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF SMC OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR THE LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE. NOTHING IN THIS WARRANTY SHALL BE TAKEN TO AFFECT YOUR STATUTORY RIGHTS.

* SMC will provide warranty service for one year following discontinuance from the active SMC price list. Under the limited lifetime warranty, internal and external power supplies, fans, and cables are covered by a standard one-year warranty from date of purchase.

SMC Networks, Inc.
38 Tesla
Irvine, CA 92618

Compliances

FCC - Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

FCC Caution: To assure continued compliance, (example - use only shielded interface cables when connecting to computer or peripheral devices). Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 5 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Note: In order to maintain compliance with the limits of a Class B digital device, SMC requires that you use a quality interface cable when connecting to this device. Changes or modifications not expressly approved by SMC could void the user's authority to operate this equipment.

Industry Canada - Class B

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par l'Industrie.

Copyright

Information furnished by SMC Networks, Inc. (SMC) is believed to be accurate and reliable. However, no responsibility is assumed by SMC for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SMC. SMC reserves the right to change specifications at any time without notice.

Copyright © 2002 by
SMC Networks, Inc.
38 Tesla
Irvine, California 92618
All rights reserved.

Trademarks

SMC is a registered trademark; and EZ Connect and EZ Hub are trademarks of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.

1 | System Requirements

- Available 32-bit Cardbus PCMCIA Type II slot
- Windows 98SE/Me/2000/XP
- Minimum of 32MB RAM and 300 MHz CPU
- Minimum of 1 MB available hard disk space for utility and driver installation
- Another IEEE 802.11b or 802.11a compliant device installed in your network, such as the SMC2304WBR-A Barricade Turbo 2.4GHz/5GHz Universal Wireless Cable/DSL Broadband Router, or another PC with a wireless adapter, such as the SMC2662W EZ Connect Wireless USB Adapter.

2 | Package Contents

After unpacking the EZ Connect 2.4GHz/5GHz Universal Wireless Cardbus Adapter, check the contents of the box to be sure you have received the following components:

- 1 SMC2335W Universal Wireless Cardbus Adapter
- 1 Driver, Utility, and Documentation CD
- 1 User Guide

Immediately inform your dealer in the event of any incorrect, missing or damaged parts. If possible, please retain the carton and original packing materials in case there is a need to return the product.

The SMC2335W adapters are covered by a limited lifetime warranty.

Please register this product and upgrade the product warranty at SMC's Web site:

<http://www.smc.com>

3 | Getting Started...

Warning:

- Network cards are sensitive to static electricity. To protect the card, avoid touching its electrical components and always touch the metal chassis of your computer before handling the card
 1. Turn on your computer and insert the Driver, Utility, and Documentation CD. Run the utility software and then reboot when requested.
 2. Find an available Cardbus slot in your computer.
 3. With the 2335W Universal Wireless Cardbus Adapter's 68-pin connector facing the Cardbus slot, and the "EZ Connect" label facing up, slide the card completely into the Cardbus slot as shown below:



Figure 3.0

4. For Windows 98SE/Me/2000, Cardbus specification is required. Please check the documents for your Cardbus adapter driver before installing the software driver for the SMC2335W.
5. The card will be automatically installed upon insertion. Once complete, you may take advantage of the wireless functionality this adapter has to offer.

4 | Driver Installation – Option 1 (Recommended) Windows 98SE/Me/2000/XP

NOTE: This installation process will require the use of your original, licensed copy of Windows. Please have your Windows CD available BEFORE proceeding with the installation.

This Installation method makes the process as simple and Plug-and-Play as possible. Simply run the driver/utility program, reboot your machine and insert your EZ Connect SMC2335W Universal Wireless Cardbus Adapter. It's as easy as 1-2-3.

Step 1: Insert the Driver, Utility and Documentation CD.

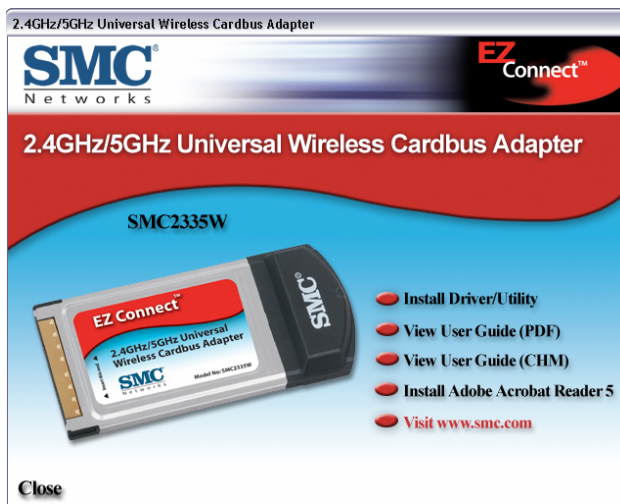


Figure 4.0

Step 2: Click the [Install Driver/Utility] button.

Step 3: The installation wizard will begin. Click [Next >].

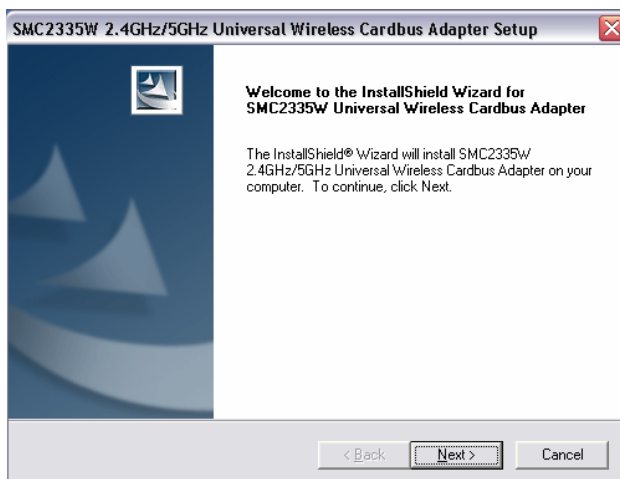


Figure 4.1

Step 4: Click [Yes >] to continue.

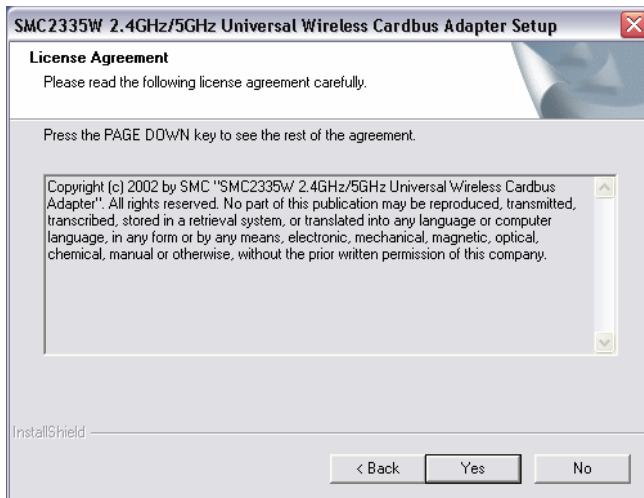


Figure 4.2

Step 5: You will be given the option to choose the location where the Configuration Utility will be installed. It is recommended to leave this at the default value. Click [Next >] to continue.

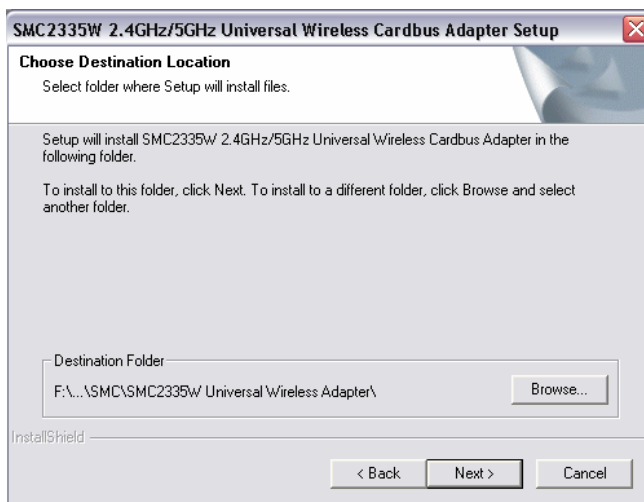


Figure 4.3

You will also be given the option to choose the Folder name that will appear in the Start Menu. It is recommended to leave this at the default value. Click [Next >] to continue.

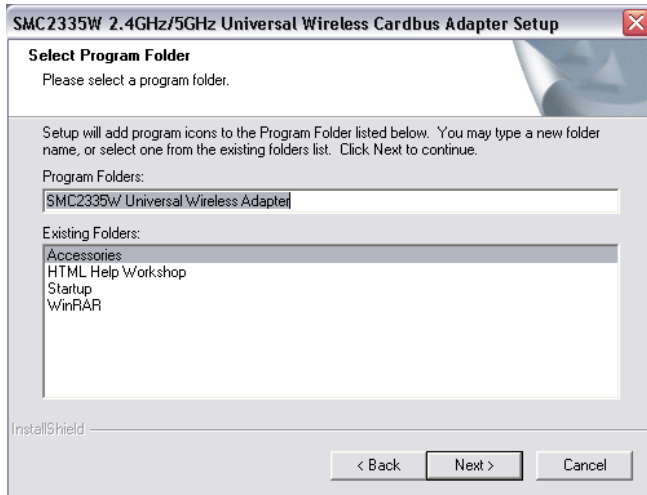


Figure 4.4

Step 6: Click [Yes] if you want to add a shortcut to this utility on your desktop.

You have now completed the utility installation process. Click [Finish] to exit the wizard.

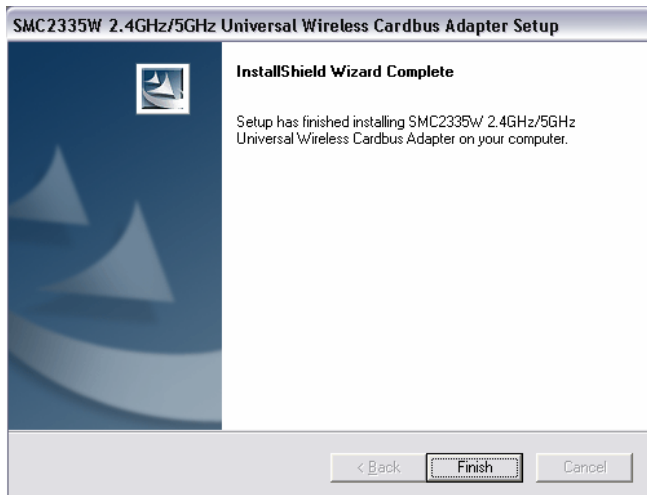


Figure 4.5

Step 7: Please shut down your machine and insert your SMC2335W adapter. Once the Windows Operating System is booted up, it will find the new hardware and automatically install it.

Section 4.1 | Other Setup Processes

The following are Operating System-specific options that may appear during this installation procedure:

Windows 98: If you are using Windows 98, you must have your original Windows CD on hand. The system will request it near the end of the installation process.

Windows Me: The installation process is fully Plug-and-Play. You will be asked to reboot when the process is complete.

Windows 2000/XP: Select [Install the software automatically] if prompted and click [Next] to complete the installation.

Continue to the Utility Configuration section for documentation on how to use the utility application for your Universal Wireless Cardbus Adapter.

5 | Driver Installation – Option 2 Windows 98SE/Me/2000/XP

Section 5.1 | Windows 98SE

NOTE: This installation process will require the use of your original, licensed copy of Windows. Please have your Windows CD available BEFORE proceeding with the installation.

Step 1: After you have inserted the EZ Connect SMC2335W Universal Wireless Adapter in your machine, the Operating System will automatically recognize the adapter and prompt you for the appropriate drivers. Click the [Next >] button to begin the installation.

Step 2: Insert the Driver CD and select the [Search for the best driver for your device] option and click [Next >].

Step 3: Clear all checkboxes except for [Specify a location:]. Then press the [Browse] button and look for the drivers on your CD-ROM. Browse to ?:\Win98_ME. (Note: The "?" equals the letter of your CD-ROM drive. In most cases, this is **D**.)

Step 4: The system should find the drivers. Click the [Next >] button to continue the installation. The wizard will show "SMC2335W Universal Wireless Cardbus Adapter".

(Note: If the system could not find the drivers, click the [< Back] button, and select the [Display a list of all the drivers...] option. Select [Network Adapters] from the list of devices, press [Have Disk] and once again browse to the location of the drivers)

Step 5: Once the system has copied the SMC drivers from the CD, it may then request files from your original Windows disk. Please insert the Windows CD at this time.

Step 6: The system will copy the files. Do NOT press [Cancel].

Step 7: Once all the necessary files are copied from the Windows CD, the driver install process will be complete. Click [Finish] to exit the wizard.



Figure 5.0

Step 8: You will then be prompted to reboot the machine. Press [Yes]. Upon reboot, the EZ Connect SMC2335W Universal Wireless Cardbus Adapter will be initialized and ready for use.

Section 5.2 | Windows Me

NOTE: This installation process will require the use of your original, licensed copy of Windows. Please have your Windows CD available BEFORE proceeding with the installation.

Step 1: After you have inserted the SMC2335W Universal Wireless Adapter in your machine and turned it back on, the OS will automatically recognize the adapter and prompt you for the appropriate drivers. Select the [Specify the location of the driver] option. Then click the [Next >] button to begin the installation.

Step 2: Insert the Driver CD and select the [Specify a location:] option. Clear the [Removable Media] checkbox. Then press the [Browse] button and look for the drivers on your CD. This should be located in ?:\Win98_ME. (Note: The ? equals the letter of your CD-ROM drive. In most cases, this is D.) Then click [Next >].

Step 3: The system should find the drivers. Click the [Next >] button to continue the installation.

(Note: If the system could not find the drivers, click the [< Back] button, and select the [Display a list of all the drivers] option. Select [Network Adapters] from the list of devices, press [Have Disk] and once again browse to the location of the drivers)

Step 4: Once all the necessary files have been copied, the driver installation is complete. Click [Finish] to exit the wizard.



Step 5: You will then be prompted to reboot the machine. Press [Yes]. Upon reboot, the SMC2335W will be initialized and ready for use.

Section 5.3 | Windows 2000

Step 1: After you have inserted the SMC2335W Universal Wireless Adapter in your machine and turned it back on, the Operating System will automatically recognize the adapter and prompt you for the appropriate drivers. Click the [Next >] button to begin the installation.

Step 2: Insert the Driver CD and select the [Search for a suitable driver...] option. Then click [Next >].

Step 3: Clear all checkboxes except for [Specify a location]. Then click [Next >].

Step 4: You will then be prompted to enter the location of the drivers. This should be ?:\Win2K_XP. (Note: The ? equals the letter of your CD-ROM drive. In most cases, this is **D**.) Then click [OK]. You can also click [Browse] and browse to the location of the drivers on the CD for further verification.

Step 5: The system should find the drivers. Click the [Next >] button to continue the installation.

(Note: If the system could not find the drivers, click the [< Back] button, and select the [Display a list of the known drivers...] option. Select [Network Adapters] from the list of devices, press [Have Disk] and once again browse to the location of the drivers)

Step 6: You have now completed the driver installation. Click [Finish] to initialize the adapter.



Figure 6.0

Section 5.4 | Windows XP

Step 1: After you have inserted the SMC2335W Universal Wireless Adapter in your machine and turned it back on, the Operating System will automatically recognize the adapter and prompt you for the appropriate drivers. Click the [Next >] button to begin the installation.

Step 2: Insert the Driver CD and check the [Include this location in the search] option. Make sure the [Search removable media] option is not checked. Click [Browse] and find the location of the drivers. This should be ?:\Win2K_XP. (Note: The ? equals the letter of your CD-ROM drive. In most cases, this is **D**.) Then click [Next >].

Step 3: This process will be completed once the drivers are copied to the hard drive and installed. Please click [Finish] to exit the wizard.



Figure 5.0

After clicking [Finish], you will see the following message in your system tray:



Figure 5.1

6 | Driver Verification Windows 98SE/Me/2000/XP

Section 6.1 | Windows 98/Me

Step 1: Right-click the My Computer icon on your desktop and click [Properties].

Step 2: Then go to the [Device Manager] tab and open the [Network adapters] section. You should see your SMC2335W Universal Wireless Cardbus Adapter in this menu. Highlight it and click [Properties].

Step 3: The Device Status shows that the "This device is working properly". If there are any error messages displayed here, you will need to click the SMC adapter and click [Remove]. Then reboot the machine and go through the installation process again.

Section 6.2 | Windows 2000

Step 1: Right-click the My Computer icon on your desktop and click [Properties].

Step 2: Then go to the Hardware tab and click [Device Manager]. Open the [Network adapters] section. You should see your SMC2335W Universal Wireless Cardbus Adapter in this menu. Right-click your adapter and click [Properties].

Step 3: The Device Status shows that the "This device is working properly". If there are any error messages displayed here, you will need to right-click the SMC adapter and click [Uninstall]. Then reboot the machine and go through the installation process again.

Section 6.3 | Windows XP

Step 1: Click [Start] and click [Control Panel]. Then click the [Performance and Maintenance] icon and select [System].

Step 2: Then go to the Hardware tab and click [Device Manager]. Open the [Network adapters] section. You should see your SMC2335W Universal Wireless Cardbus Adapter in this menu. Right-click the adapter and click [Properties].

Step 3: The Device Status shows that "This device is working properly". If there are any error messages displayed here, you will need to right-click the SMC adapter and click [Uninstall]. Then reboot the machine and go through the installation process again.

7 | Utility Installation Windows 98SE/Me/2000/XP

This Installation method makes the process as simple and Plug-and-Play as possible. Simply run the driver/utility program, reboot your machine and insert your EZ Connect SMC2335W Universal Wireless Cardbus Adapter. It's as easy as 1-2-3.

Step 1: Insert the Driver, Utility and Documentation CD.

Step 2: Click the [Install Driver/Utility] button.

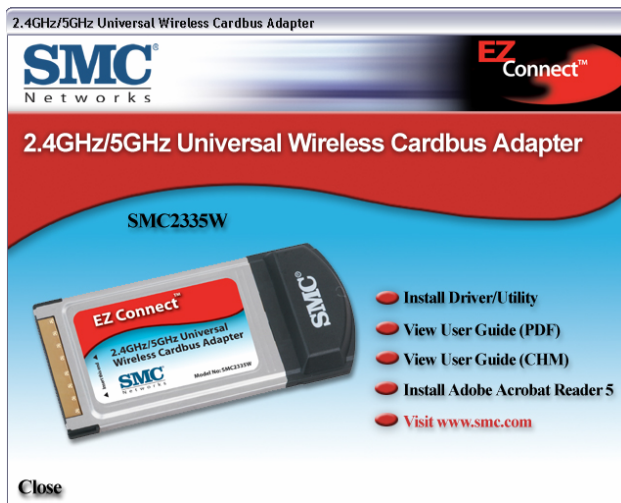


Figure 7.0

Step 3: The installation wizard will begin. Click [Next >].

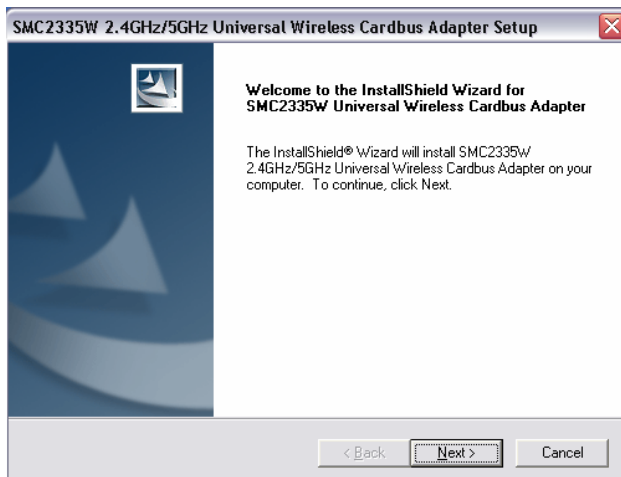


Figure 7.1

Step 4: Click [Yes >] to continue.

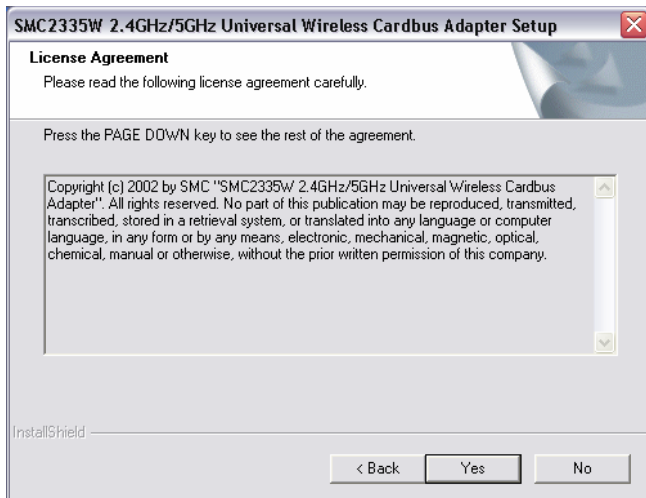


Figure 7.2

Step 5: You will be given the option to choose the location where the Configuration Utility will be installed. It is recommended to leave this at the default value. Click [Next >] to continue.

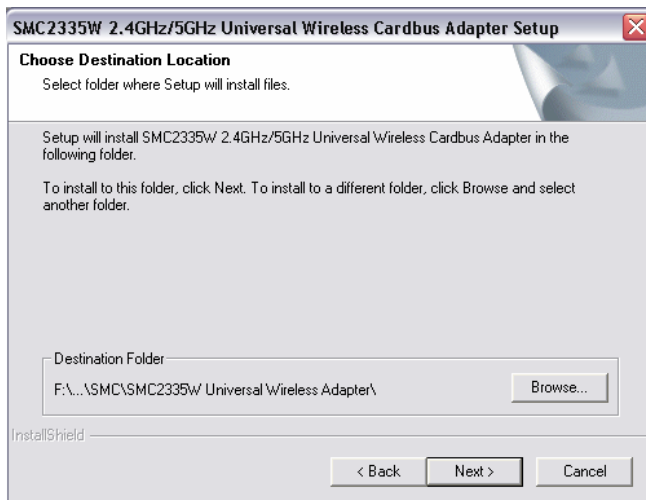


Figure 7.3

You will also be given the option to choose the Folder name that will appear in the Start Menu. It is recommended to leave this at the default value. Click [Next >] to continue.

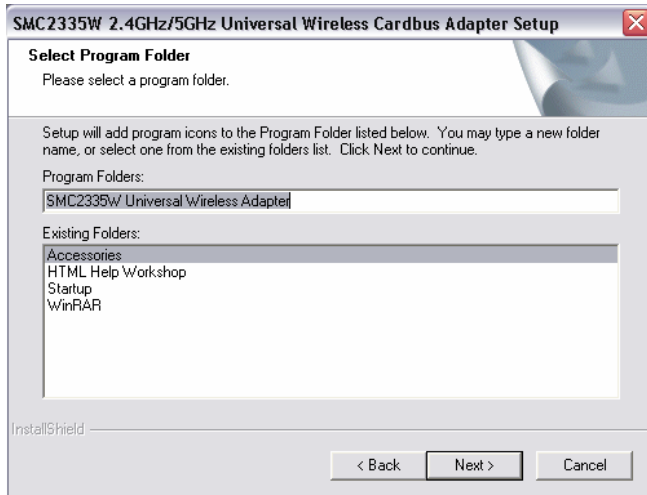


Figure 7.4

Step 6: Click [Yes] if you want to add a shortcut to this utility on your desktop.

You have now completed the utility installation process. Click [Finish] to exit the wizard.

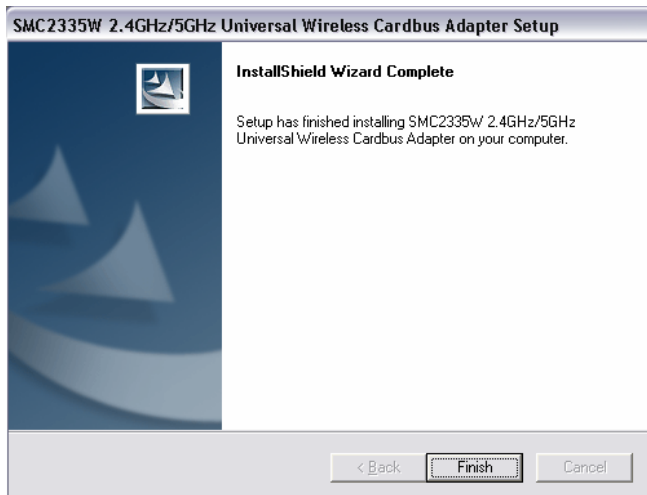


Figure 7.5

Step 7: Please shut down your machine. Then insert your SMC2335W adapter and boot up the Windows Operating System.

8 | Utility Configuration

When the utility program is running, there will be a quick launch icon in the lower right-hand corner of the task bar. The icon will be GREEN if you have a good connection to a wireless network. If it is red, you will need to verify the network settings and check to be sure that the Wireless Access Point on your network is turned on. You may also need to re-position the Access Point and place it in a higher position so that you are able to gain more wireless signal strength.

Double-click the quick launch icon in the system tray to bring up the Configuration Utility. This provides quick access to management statistics and adapter settings.



Figure 8.0

The Configuration Utility includes the following tabs:

Status: Allows you to view/monitor network status, throughput, wireless mode, and TCP/IP Information.

Site Survey: Displays all the Access Points within range of the wireless adapter's signal. Allows you to configure and modify Profiles.

About: Shows the driver and utility version information.

Section 8.1 | Status

When the Configuration Utility is initialized, the Status window will be immediately shown. This will show you the connection status of the wireless adapter. When you are connected to the network, you will see the oscillating bars next to Signal Strength and the Status field will show that it is "Associated" as well. The Network Connection will display "AP (Infrastructure)" when the client is configured to connect to an Access Point. It will display "Ad Hoc" when the client is configured to connect wirelessly to another wireless client.

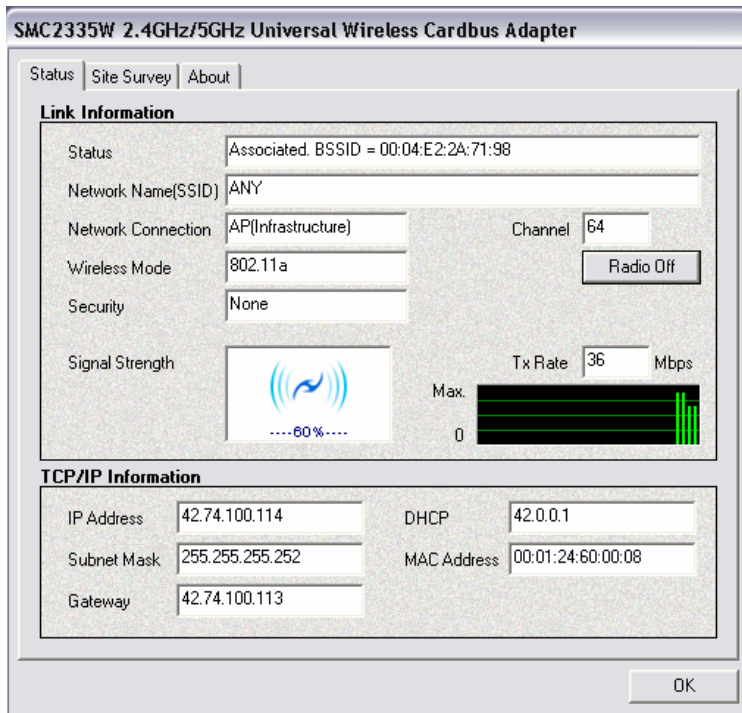


Figure 8.1

Settings cannot be changed on this tab. This tab gives you the data you need to determine which wireless network you are connected to and your connection speed. It also shows the SSID and Transmission speed of that network, and it gives you TCP/IP information.

Section 8.2 | Site Survey

The Site Survey tab scans and displays all Access Points on the wireless LAN. Note that it will display BOTH 802.11b and 802.11a networks. The "Connection Mode" column will allow you to identify the network type. To choose a network, simply double-click the "Network Name". For verification purposes, you will be prompted to confirm that you have selected the correct WLAN. Just click [Yes] to connect to the network. If the network is encrypted, you will be prompted to enter the appropriate keys.

The "Connection State" column represents the MAC address of the wireless network. Other columns include "WEP", "Signal Strength", and "Channel".

The bottom window shows the Profiles that you have configured. You can create a new Profile by clicking [New]. You can also modify or delete a selected profile. To modify settings, highlight the desired profile and click the [Modify] button. See the Configuration section below for more information.

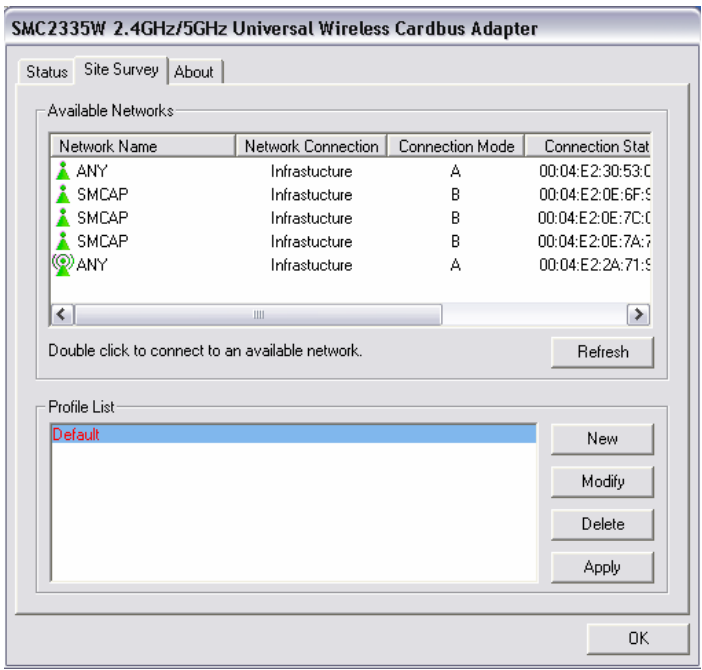


Figure 8.2

Section 8.3 | Configuration

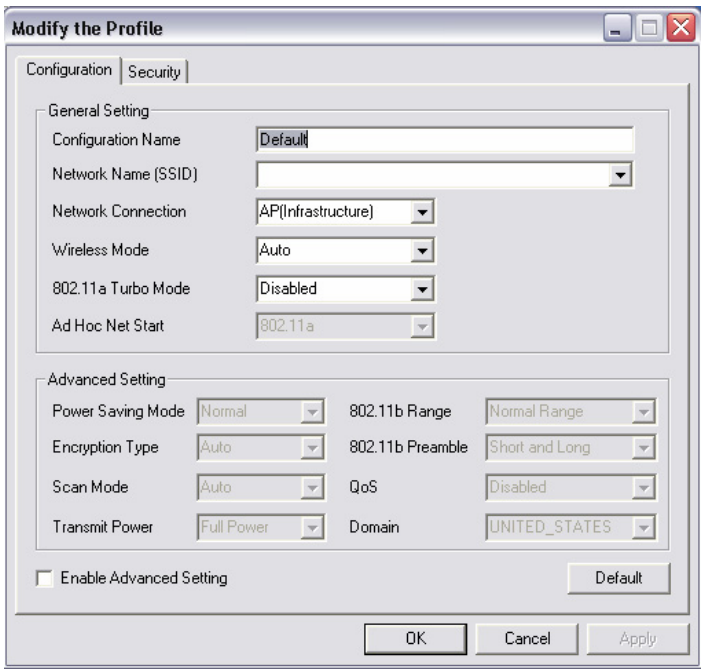


Figure 8.3

To change the settings, simply enter the new desired values and click the [OK] button. The wireless adapter will automatically associate with the same channel that the network is using.

Network Name (SSID): The limit is 32 characters. Input the SSID of the wireless network you want to connect to. If you will be roaming among multiple Access Points with different BSSID's, leave the SSID blank to allow the client to connect to the access point with the highest signal strength.

Network Connection: Specifies the mode of the network. Two options are "Infrastructure" and "Ad Hoc".

Wireless Mode: The available options are "802.11b", "802.11a" or "Auto". "Auto" allows the use of either 802.11a or 802.11b mode.

802.11a Turbo Mode: This function disables or enables the 802.11a Turbo mode.

Ad Hoc Net Start: Specifies a Radio Frequency band to use to establish an Ad Hoc network if no matching SSID (wireless network) is found. Three options are available: 802.11b, 802.11a, and 802.11a Turbo. If the SMC2335W cannot link to your Adhoc network, it will establish a new Adhoc network on the Radio Frequency band specified by this Adhoc Net Start setting.

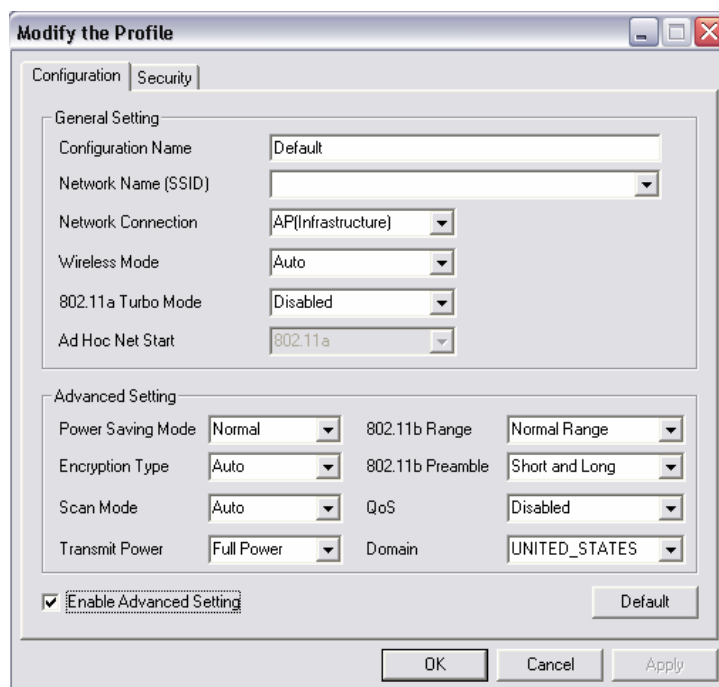


Figure 8.4

Check the [Enable Advanced Setting] checkbox in order to view the bottom portion of the Configuration window.

Power Saving Mode: There are three available power management options: "Off", "Normal" and "Maximum". In Ad Hoc mode, Power Savings function cannot be enabled.

Encryption Type: There are three available options: "WEP", "AES" and "Auto". WEP stands for

Wired Equivalent Privacy, and AES stands for Advanced Encryption Standard. AES provides a much higher level of security. "Auto" allows the Adapter and AP to negotiate the encryption type. If AES is not available, WEP is used. By default, the Adapter is set to "Auto" and will attempt to use AES first. If the Access Point supports WEP only or is configured for WEP only, the Adapter will automatically use WEP. See the Encryption section for more info.

Scan Mode: There are three available options: "Active Scan", "Passive Scan" and "Auto".

Transmit Power: There are five available options: "Full Power", "50% Power", "25% Power", "12% Power" and "Lowest Power". Full Power is the default setting and this will ensure the highest signal strength and link quality.


802.11b Range: There are two available options: "Normal Range" and "Extended Range".

802.11b Preamble: Allows Ad Hoc compatibility with other 2.4GHz devices. There are two available options: "Short and Long" and "Long only".

QoS: You can disable or enable the Quality of Service (QoS) feature. QoS provides priority to a certain pre-defined service such as voice or video. Please note that your Access Point must also support QoS in order to take advantage of these features.

Domain: Select one country where you are located from the drop-down menu.

Section 8.4 | Encryption

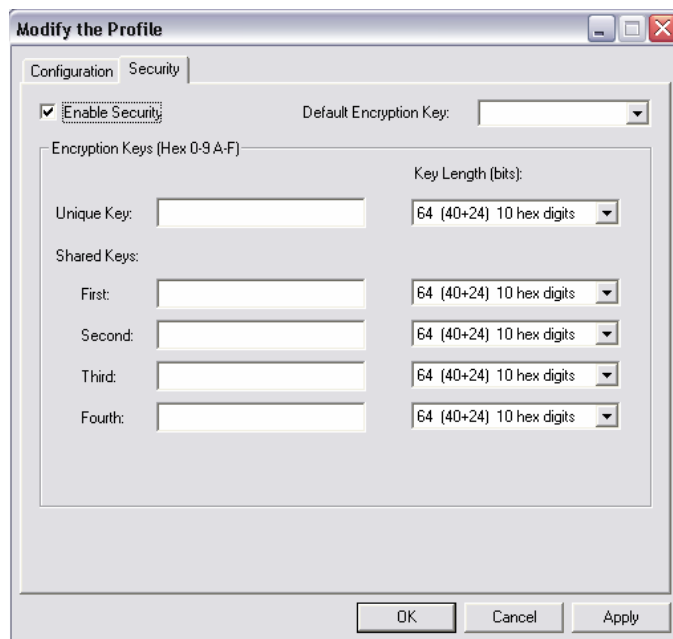

The screenshot shows a dialog box titled "Modify the Profile" with two tabs: "Configuration" and "Security". The "Security" tab is active. At the top, there is a checkbox labeled "Enable Security" which is checked. To its right is a "Default Encryption Key:" dropdown menu. Below this, there is a section titled "Encryption Keys (Hex 0-9 A-F)". This section contains a "Unique Key:" field and a "Key Length (bits):" dropdown menu set to "64 (40+24) 10 hex digits". Underneath, there is a "Shared Keys:" section with four rows, each labeled "First:", "Second:", "Third:", and "Fourth:". Each row has a text input field and a "Key Length (bits):" dropdown menu, all set to "64 (40+24) 10 hex digits". At the bottom of the dialog box are three buttons: "OK", "Cancel", and "Apply".

Figure 8.5

For more secure data transmissions, you can enable the encryption by going to the Security tab and clicking the [Enable Security] checkbox. Then enter the appropriate keys. The SMC2335W

fully supports 64/128-bit WEP in 802.11b mode and 64/128/152-bit in 802.11a mode. By default, the WEP is disabled.

For the HEX Key Format, the security is enabled by entering 10-digit keys for the 64-bit WEP configuration, 26-digit keys for a 128-bit WEP configuration or 32-digit keys for a 152-bit WEP configuration. For the ASCII Key Format, the security is enabled by entering 5-letter keys for 64-bit WEP, 13-letter keys for 128-bit WEP or 16-letter keys for 152-bit WEP.

Be sure to select the desired "Default Encryption Key" in the top right corner of the window.

Section 8.5 | About

The About screen displays the version information.

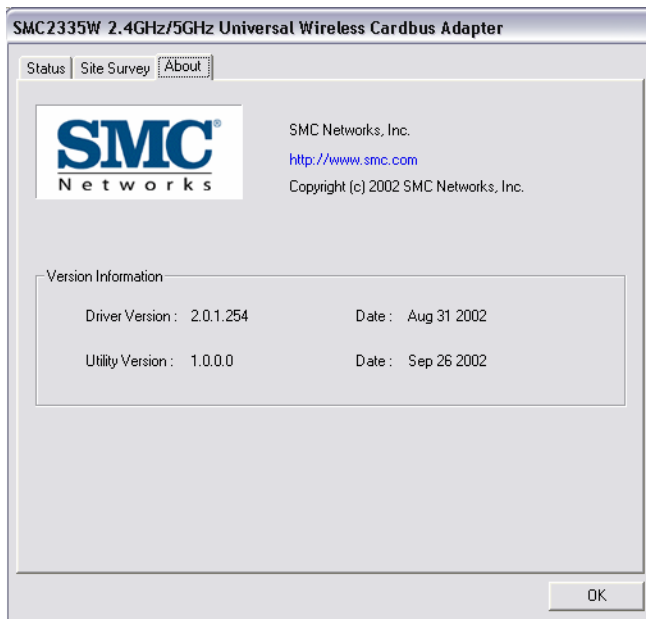


Figure 8.6

9 | Disable Wireless Zero Configuration in Windows XP

It is recommended that you use the SMC2335W Configuration Utility to manage your Universal Wireless Cardbus Adapter. If you are using the SMC utility in Windows XP, you will be prompted to disable the Wireless Zero Configuration. Follow the instructions below.

Go to Control Panel and open Network Connections. Right-click the Wireless Network Connection, and select [Properties]. Select the "Wireless Networks" tab and uncheck the [Use Windows to configure my wireless network settings] check box.

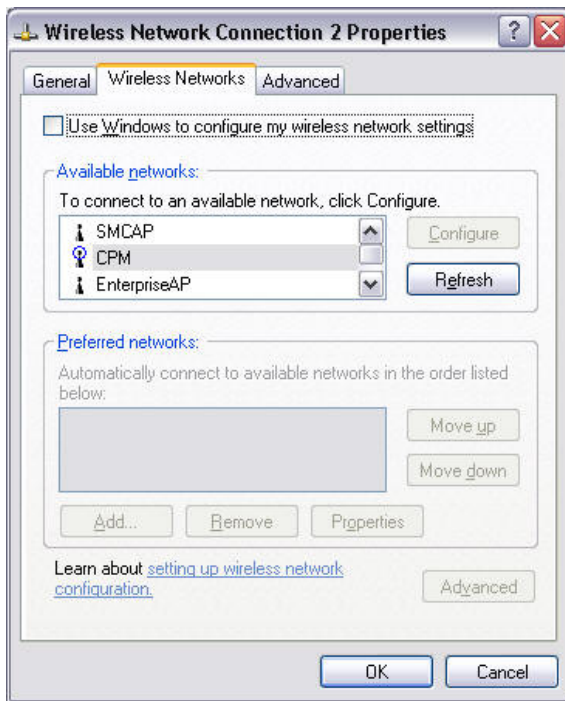


Figure 9.0

10 | Frequently Asked Questions

What is a Wireless LAN?

A local area network that transmits over the air typically in an unlicensed frequency such as the 2.4GHz band. A wireless LAN does not require lining up devices for line of sight transmission like IrDA. Wireless access points (base stations) are connected to an Ethernet hub or server and transmit a radio frequency over an area of several hundred to a thousand feet which can penetrate walls and other non-metal barriers. Roaming users can be handed off from one access point to another like a cellular phone system. Laptops use wireless network cards that plug into an existing PCMCIA slot or that are self contained on PC cards, while stand-alone desktops and servers use plug-in cards (ISA, PCI, etc.).

What is AD-HOC?

An AD-HOC network is a peer to peer network where all the nodes are wireless clients. As an example, two PC's with wireless adapters can communicate with each other as long as they are within range. A wireless extension point can extend the range of an AD-HOC network.

What is the 802.11 standard?

A family of IEEE standards for wireless LANs first introduced in 1997. 802.11 provides 1 or 2 Mbps transmission in the 2.4GHz band using either a frequency hopping modulation (FHSS) technique or direct sequence spread spectrum (DSSS), which is also known as CDMA. The 802.11b standard defines an 11 Mbps data rate in the 2.4GHz band, and the 802.11a standard defines 54 Mbps in the 5GHz band.

What is Infrastructure?

In order for your wireless components to interact with traditional wired networks they need a media bridge to translate for them. This is where INFRASTRUCTURE or Network mode comes into play. An ACCESS POINT is attached to the network using CAT-5 Ethernet cable attaching to a hub, switch or another PC. Wireless PC's can then communicate to Wired Ethernet computers through this access point. The total range of the network is limited to a radius around this Access Point. To increase the range, extra Access Points may be wired into the network. These Access Points talk to each other over the hard-wired Ethernet cables however, they cannot communicate wirelessly to one another and they must be wired to the same network. Individual wireless PC's can move between Access Points on the same network seamlessly due to a feature called ROAMING.

What is Tx Rate?

Tx-Rate or TRANSFER RATE is the current speed at which the network component is operating. SMC-802.11b products can operate at speeds of 1Mb, 2Mb, 5.5Mb, & 11Mbps. A wireless card set to AUTO will attempt to connect at whatever speed will give the best throughput on the network.

What is RTS Threshold?

(Request To Send) An RS-232 signal sent from the transmitting station to the receiving station requesting permission to transmit. RTS is a collision avoidance method used by all 802.11b

wireless networking devices. In most cases you will not need to activate or administer RTS. Only if you find yourself in an Infrastructure environment where all nodes are in range of the Access Point but may be out of range of each other. It is recommended to leave this setting at its default value leaving this feature disabled.

What is Authentication Algorithm?

Authentication Algorithm is the means by which one station is authorized to communicate with another. In an Open System, any station can request authorization in accordance with the WECA standard. In a Shared key system, only stations that possess a secret encrypted key may participate in the network. This is a low level security key which allows the equipment with the shared key algorithm to see each other on the wireless lan.

What is DBI?

The ability of the antenna to shape the signal and focus it in a particular direction is called Antenna Gain, and is expressed in terms of how much stronger the signal in the desired direction is, compared to the worst possible antenna, which distributes the signal evenly in all directions (an Isotropic Radiator). To express the relationship to the Isotropic reference, this is abbreviated: "dBi". The typical omni-directional "stick" antenna is rated at 6-8 dBi, indicating that that by redirecting the signal that would have gone straight up or down to the horizontal level, 4 times as much signal is available horizontally. A parabolic reflector design can easily achieve 24 dBi.

What is WEP?

Short for Wired Equivalent Privacy, WEP is a security protocol for wireless local area networks (WLANs) defined in the 802.11b and 802.11a standards.

WEP is designed to provide the same level of security as that of a wired LAN. LANs are inherently more secure than WLANs because LANs are somewhat protected by the physicalities of their structure, having some or all part of the network inside a building that can be protected from unauthorized access. WLANs, which are over radio waves, do not have the same physical structure and therefore are more vulnerable to tampering.

WEP aims to provide security by encrypting data over radio waves so that it is protected as it is transmitted from one end point to another. The Wired Equivalent Privacy (WEP) feature uses the RC4 PRNG algorithm developed by RSA Data Security, Inc.

If your wireless access point supports MAC filtering, it is recommended that you use this feature in addition to WEP (MAC filtering is much more secure than encryption).

11 | Troubleshooting

Common Installation Problems

Problems are often caused by conflicts with other devices installed in the same computer, or software that has been configured incorrectly. If you encounter a problem with the EZ Connect SMC2335W Universal Wireless Cardbus Adapter, use the following checklists to identify and correct the problem.

- If your computer cannot find the Wireless Card, or the network driver does not install correctly, check the following items before contacting SMC Technical Support
 - Make sure the card is securely seated in the PCMCIA or PCI slot. Check for any hardware problems, such as physical damage to the card.
 - Try the card in another PCMCIA or PCI slot. If this fails, test the card in a completely different system or try using a second Wireless Card in that particular slot.
 - Check for resource conflicts
 - Make sure your computer is using the latest BIOS available. Contact the manufacturer of the laptop, motherboard for information on updating the BIOS (e.g. – Dell, Toshiba, etc)
 - If there are other network cards in the computer, they may be causing conflicts. Remove all other cards from the computer and test the Wireless Card separately.

Network Connection Problems

There may be a network connection problem if the LED on the card does not light, or if you cannot access any network resources from the computer. Check the following items before contacting SMC Technical Support.

- Make sure the correct network card driver is installed for your operating system. If necessary, try uninstalling and reinstalling the driver. To do this, first shut down your machine and remove your SMC adapter. Then boot up and open up your Start Menu, go to Programs, click the "SMC2335W Universal Wireless Adapter" program folder and choose "Uninstall". Reboot the machine when requested to do so. Then insert your Driver CD and run the Setup.exe utility again. Then shut down the computer, reinsert your SMC adapter and boot up the machine. The OS should properly reinstall the adapter during this time.
- Make sure the computer and other network devices are receiving power. If you suspect a power outlet to be faulty, plug another device into it to verify that it is working.
- If your wireless station cannot communicate with a computer on the Ethernet LAN when configured for Infrastructure mode, try changing the wireless channel on the AP. Make sure the SSID is the same as that used by the AP for a station with roaming disabled, or the same as that used by the AP's in the extended service set (ESS).
- The Access Point you are trying to attach to is defective or may not be configured properly to accept your signal. Check with the administrator of your wireless network for more information on connecting to the LAN. Also run the necessary diagnostics on the AP to make sure the unit is fully operational.
- If you cannot access the Internet, be sure to check with the ISP for further instructions once the drivers for the Wireless Card are installed properly.

12 | SMC Networks EZ Connect 2.4GHz/5GHz Wireless Cardbus Adapter Maximum Distance Table

Maximum distances posted below are actual tested distance thresholds. However, there are many variables such as barrier composition and construction, as well as local environmental interference that may impact your actual distances and cause you to experience distance thresholds far lower than those posted below. If you have any questions or comments regarding the features or performance of this product, or if you would like information regarding our full line of wireless products, you can visit us at www.smc.com, or you can call us toll-free at 800.SMC.4YOU. SMC Networks stands behind every product sold with a 30-day satisfaction guarantee and a limited-lifetime warranty.

802.11a Wireless Distance Table									
Environmental Condition	Speed and Distance Ranges								
	72 Mbps	54 Mbps	48 Mbps	36 Mbps	24 Mbps	18 Mbps	12 Mbps	9 Mbps	6 Mbps
Outdoors: A line-of-sight environment with no interference or obstruction between the Access Point and users.	40 m (131 ft)	80 m (262 ft)	230 m (755 ft)	300 m (984 ft)	340 m (1115 ft)	370 m (1214 ft)	400 m (1312 ft)	465 m (1526 ft)	500m (1650 ft)
Indoors: A typical office or home environment with floor to ceiling obstructions between the Access Point and users.	20 m (66 ft)	25 m (82 ft)	35 m (115 ft)	40 m (131 ft)	45 m (148 ft)	50 m (164 ft)	55 m (180 ft)	57 m (187 ft)	60 m (197 ft)

802.11b Wireless Distance Table				
Environmental Condition	Speed and Distance Ranges			
	11 Mbps	5.5 Mbps	2 Mbps	1 Mbps
Outdoors: A line-of-sight environment with no interference or obstruction between the Access Point and users.	160 m (524 ft)	270 m (886 ft)	400 m (1312 ft)	500 m (1650 ft)
Indoors: A typical office or home environment with floor to ceiling obstructions between the Access Point and users.	25 m (82 ft)	35 m (115 ft)	45 m (148 ft)	55 m (180 ft)

13 | Technical Specifications

Standards:

IEEE 802.11b and IEEE 802.11a compliant

Wireless Data Rates (With Automatic Fall-back):

802.11b = 1/2/5.5/11 Mbps

802.11a = 6/9/12/18/24/36/48/54 Mbps

802.11a Turbo = 12/18/24/36/48/72/96/108 Mbps

Data Modulation Techniques:

802.11b (DSSS) = BPSK, QPSK, CCK

802.11a (OFDM) = BPSK, QPSK, 16-QAM, 64-QAM

Host Interface:

32-bit Cardbus Interface

Operating Range:

Up to 1,650 ft

Network Configuration:

Ad-Hoc (Peer-to-Peer)

Infrastructure

Radio Signal Type:

Direct Sequence Spread Spectrum (DSSS)

Orthogonal Frequency Division Multiplexing (OFDM)

Media Access Protocol:

CSMA/CA (Collision Avoidance) with ACK architecture 32-bit MAC

Security:

802.11a mode = 64/128/152-bit Wired Equivalent Privacy (WEP)

802.11b mode = 64/128-bit WEP

Advanced Encryption Standard (AES)

Channel Support (2.4GHz RF):

US/Canada - 11

France - 4

Japan - 14

Europe - 13

Channel Support (5GHz RF):

US/Canada - 12 non-overlapping channels

- 5.15-5.35GHz, 5.725-5.825GHz

Europe - 19 non-overlapping channels

- 5.15-5.35GHz, 5.47-5.725GHz

Japan - 4 non-overlapping channels

- 5.15-5.25GHz

RF Output Power:

802.11b - 18 dBm

802.11a -

U.S.A.:

- a) 5.150 – 5.250: peak power to 50mW (17dBm) per FCC 15.407 specification (UNII band operation).
- b) 5.250 – 5.350: peak power to 250mW (24 dBm) per FCC 15.407 specification (UNII band operation).
- c) 5.470 – 5.725: not allowed
- d) 5.725 – 5.825: peak power to 1W (30 dBm) per FCC 15.407 specification (UNII band operation).

Europe:

- a) 5.150 – 5.250 and 5.250 – 5.350: European regulations limit power in these bands to 200 mW EIRP (23 dBm).
- b) 5.470 – 5.725: 1W EIRP (30 dBm) allowed.
- c) 5.725 – 5.825: calibrated to provide 20 dBm peak power.

Japan:

- a) 5.150 – 5.250: 200 mW EIRP (23 dBm).
- b) 5.250 – 5.825: not allowed

Operating Systems:

Windows 98SE/Me/2000/XP

LED Indicators:

Power

Network Link

Power Voltage:

3.3 Volt \pm 5%

Power Consumption:

Transmission mode < 1155mW

Receive mode < 1221mW

Standby mode < 297mW

Power saving mode < 39.6mW

Dimensions:

4.625 x 2.125 x 0.375 in

Compliance:

USA: FCC Part 15 Class B

Europe: CE-Mark

Industry Canada

IEC 60950

WiFi Compliant

Microsoft WHQL Windows 2000

Microsoft WHQL Windows XP

Temperature Range:

Operating: -0 C - +70 C

Storage: -20 C - +80 C

13 | Terminology

10BaseT - Physical Layer Specification for Twisted-Pair Ethernet using Unshielded Twisted Pair wire at 10Mbps. This is the most popular type of LAN cable used today because it is very cheap and easy to install. It uses RJ-45 connectors and has a cable length span of up to 100 meters. There are two versions, STP (Shielded Twisted Pair) which is more expensive and UTP (Unshielded Twisted Pair), the most popular cable. These cables come in 5 different categories. However, only 3 are normally used in LANs, Category 3, 4 and 5. CAT 3 TP (Twisted Pair) cable has a network data transfer rate of up to 10Mbps. CAT 4 TP cable has a network data transfer rate of up to 16Mbps. CAT 5 TP cable has a network data transfer rate of up to 100Mbps.

Access Point - A device that is able to receive wireless signals and transmit them to the wired network, and vice versa - thereby creating a connection between the wireless and wired networks.

Ad Hoc - An ad hoc wireless LAN is a group of computers, each with LAN adapters, connected as an independent wireless LAN.

Adapter - A device used to connect end-user nodes to the network; each contains an interface to a specific type of computer or system bus, e.g. EISA, ISA, PCI, PCMCIA, CardBus, etc.

Auto-Negotiation - A signaling method that allows each node to define its operational mode (e.g., 10/100 Mbps and half/full duplex) and to detect the operational mode of the adjacent node.

Backbone - The core infrastructure of a network. The portion of the network that transports information from one central location to another central location where it is unloaded onto a local system.

Base Station - In mobile telecommunications, a base station is the central radio transmitter/receiver that maintains communications with the mobile radiotelephone sets within its range. In cellular and personal communications applications, each cell or micro-cell has its own base station; each base station in turn is interconnected with other cells' bases.

BSS - BSS stands for "Basic Service Set". It is an Access Point and all the LAN PCs that are associated with it.

CSMA/CA - Carrier Sense Multiple Access with Collision Avoidance

DHCP - Dynamic Host Configuration Protocol. This protocol automatically configures the TCP/IP settings of every computer on your home network.

DNS - DNS stands for Domain Name System, which allows Internet host computers to have a domain name (such as www.smc.com) and one or more IP addresses (such as 192.34.45.8). A DNS server keeps a database of host computers and their respective domain names and IP addresses, so that when a domain name is requested (as in typing " www.smc.com" into your Internet browser), the user is sent to the proper IP address. The DNS server address used by the computers on your home network is the location of the DNS server your ISP has assigned.

DSL - DSL stands for Digital Subscriber Line. A DSL modem uses your existing phone lines to transmit data at high speeds.

Ethernet - A standard for computer networks. Ethernet networks are connected by special cables and hubs, and move data around at up to 10 million bits per second (Mbps).

ESS - ESS (ESS-ID, SSID) stands for "Extended Service Set". More than one BSS is configured to become an Extended Service Set. LAN mobile users can roam between different BSSs in an ESS (ESS-ID, SSID).

Fast Ethernet NIC - Network interface card that is in compliance with the IEEE 802.3u standard. This card functions at the media access control (MAC) layer, using carrier sense multiple access with collision detection (CSMA/CD).

Fixed IP – (see Static IP)

Full-Duplex - Transmitting and receiving data simultaneously. In pure digital networks, this is achieved with two pairs of wires. In analog networks, or digital networks using carriers, it is achieved by dividing the bandwidth of the line into two frequencies, one for sending, one for receiving.

Hub - Central connection device for shared media in a star topology. It may add nothing to the transmission (passive hub) or may contain electronics that regenerate signals to boost strength as well as monitor activity (active/intelligent hub). Hubs may be added to bus topologies; for example, a hub can turn an Ethernet network into a star topology to improve troubleshooting.

IP Address - IP stands for Internet Protocol. An IP address consists of a series of four numbers separated by periods, that identifies an single, unique Internet computer host. Example: 192.34.45.8.

ISP - Internet Service Provider. An ISP is a business that provides connectivity to the Internet for individuals and other businesses or organizations.

LAN - A communications network that serves users within a confined geographical area. It is made up of servers, workstations, a network operating system and a communications link. Servers are high-speed machines that hold programs and data shared by network users. The workstations (clients) are the users' personal computers, which perform stand-alone processing and access the network servers as required.

Diskless and floppy-only workstations are sometimes used, which retrieve all software and data from the server. Increasingly, "thin client" network computers (NCs) and Windows terminals are also used. A printer can be attached locally to a workstation or to a server and be shared by network users. Small LANs can allow certain workstations to function as a server, allowing users access to data on another user's machine. These peer-to-peer networks are often simpler to install and manage, but dedicated servers provide better performance and can handle higher transaction volume. Multiple servers are used in large networks.

The message transfer is managed by a transport protocol such as TCP/IP and NetBEUI. The physical transmission of data is performed by the access method (Ethernet, Token Ring, etc.), which is implemented in the network adapters that are plugged into the machines. The actual communications path is the cable (twisted pair, coax, optical fiber) that interconnects each network adapter.

MAC Address - MAC (Media Access Control) A MAC address is the hardware address of a device connected to a network.

MDI / MDI-X - Medium Dependent Interface - Also called an "uplink port," it is a port on a network hub or switch used to connect to other hubs or switches without requiring a crossover cable. The MDI port does not cross the transmit and receive lines, which is done by the regular

ports (MDI-X ports) that connect to end stations. The MDI port connects to the MDI-X port on the other device. There are typically one or two ports on a device that can be toggled between MDI (not crossed) and MDI-X (crossed).

Medium Dependent Interface – X (crossed) - A port on a network hub or switch that crosses the transmit lines coming in to the receive lines going out.

NAT – (Network Address Translation) This process allows all of the computers on your home network to use one IP address. The NAT capability of the Barricade, allows you to access the Internet from any computer on your home network without having to purchase more IP addresses from your ISP. Network Address Translation can be used to give multiple users access to the Internet with a single user account, or to map the local address for an IP server (such as Web or FTP) to a public address. This secures your network from direct attack by hackers, and provides more flexible management by allowing you to change internal IP addresses without affecting outside access to your network. NAT must be enabled to provide multi-user access to the Internet or to use the Virtual Server function.

Packet Binary Convolutional Code(tm) (PBCC) - A modulation technique developed by Texas Instruments Inc. (TI) that offers data rates of up to 22Mbit/s and is fully backward compatible with existing 802.11b wireless networks.

PCI - Peripheral Component Interconnect - Local bus for PCs from Intel that provides a high-speed data path between the CPU and up to 10 peripherals (video, disk, network, etc.). The PCI bus runs at 33MHz, supports 32-bit and 64-bit data paths, and bus mastering.

Roaming - A function that allows your to move through a particular domain without losing network connectivity.

Static IP - If your Service Provider has assigned a fixed IP address; enter the assigned IP address, subnet mask and the gateway address provided by your service provider.

Subnet Mask - A subnet mask, which may be a part of the TCP/IP information provided by your ISP, is a set of four numbers configured like an IP address. It is used to create IP address numbers used only within a particular network (as opposed to valid IP address numbers recognized by the Internet).

TCP/IP - Transmission Control Protocol/Internet Protocol. This is the standard protocol for data transmission over the Internet.

TCP - Transmission Control Protocol - TCP and UDP (User Datagram Protocol) are the two transport protocols in TCP/IP. TCP ensures that a message is sent accurately and in its entirety. However, for real-time voice and video, there is really no time or reason to correct errors, and UDP is used instead.

UDP - User Datagram Protocol - A protocol within the TCP/IP protocol suite that is used in place of TCP when a reliable delivery is not required. For example, UDP is used for real-time audio and video traffic where lost packets are simply ignored, because there is no time to retransmit. If UDP is used and a reliable delivery is required, packet sequence checking and error notification must be written into the applications.

